











Drive analysis

The six indicators on the DAP are:



High RPM

Before turning red, the LED turns amber to warn you to change gear sooner. When the RPM is too high, this LED turns red.



Unsteady Driving

The DAP detects fluctuating accelerator pedal usage.



Engine power

Amber LED when torque is too high. When the light is red, the DAP detects unnecessary use of Engine Power.



Harsh Acceleration

If the DAP notices that you accelerate too fast, the red LED will flash.



ECO driving

Good and efficient driving is rewarded with a green LED. Red LED will flash when idling for more than 3 minutes



Anticipating the road ahead

Green LED flashes when coasting. Red LED flashes when not anticipating the road ahead and not being proactive.





SOLUTIONS

Advanced Tell-tales Environment Event Data Recorder Maintenance Safety Tachograph



PRODUCTS

BE
CANcliQ and DatacliQ
Driver Awareness Panel
REMOTE
SOLID



VEHICLES

Buses and Coaches Electric Vehicles First Response Vehicles Trailers Trucks



INFORMATION

Wired Networks
Wireless Networks



MEMBER OF